

Opening the Polls

Touch Screen Machines – ExpressVote Ballot Marking Device

- The Touch Screen Machines are in the black padded bags with straps.
- Unzip the black bag and remove the Machine.
- Lay the Machine face down on a flat surface (preferably the table it will sit on).
- Pull the metal kickstand out from the back.
- The power cord is in the side pocket of the black bag.
- Plug the circular end of the power cord in the back of the machine. Make sure the power cord goes under the kickstand.
- Set the machine up with the kickstand resting on the table.
- Plug the power cord into the power strip and plug the power strip into the outlet. Make sure the switch on the power strip is on.
- Remove the Security Seal sticker from the door on the left side of the Machine.
- Use the barrel key to unlock the door.
 - The keys are located in the yellow security return bag.
- Verify the machine is in “Voter” mode.
- Turn on the Machine by pressing the power button to “On”.
- The Machine takes approximately five minutes to power up. Do not touch the screen during the startup.
- Once the startup is complete, a touchscreen keyboard will appear asking you to enter the Election Code.
- The Election Code can be found in an envelope in the yellow security return bag.
- Enter the Election Code using the touchscreen keyboard. The code is case sensitive.
- Press “Accept”.

- Open the white corrugated plastic privacy screen and place it on the machine.
- Position the machines so the touch screen is not visible to anyone other than the Voter while they are voting. Be aware of doorways and windows.
- The machine is now ready for voting.

Precinct Scanner – DS200 Scanner

- Using the flat silver key unlock the gray door located on the back of the unit at the top.
- The power cord is located in this door. Plug in the cord.
- Using the flat silver key unlock the lock located between the two latches on the front of the unit at the top.
- Unhook the latches. Open the clamshell lid.
- Using the barrel key unlock the lock on the front of the scanner.
- Lift the black screen. The scanner should automatically begin to startup.
 - If the scanner does not automatically begin to startup remove the Security Seal from the gray door on the front left.
 - Unlock the door using a barrel key. Press the power button.
 - Verify the machine is plugged into an outlet.
 - If you hear beeping it is not plugged in, or if you have it in a power strip the power strip may not be turned on.
- Once the startup is complete, a touchscreen keyboard will appear asking you to enter the Election Code.
- The Election Code can be found in an envelope in the yellow security return bag. (The Election Code for the Touch Screen Machine and Scanner are the same).
- Enter the Election Code using the touchscreen keyboard. The code is case sensitive.
- Press “Accept”.
- The Configuration Report will automatically print. Leave it attached.

- Make sure the screen shows green checkmarks before “Election definition found” and “Plugged into electricity”.
- Press “Open Poll”.
- The Ballot Status Report and the Zero Totals Report will automatically print.
- Verify the vote counts are zero on the Zero Totals Report. Remove the reports. The poll workers will need to sign the Zero Totals Report on the provided lines.
 - The reports are folded and placed in the large gold Envelope marked as “Election Return Envelope A”. It is located in the white Elections Supply Box. The white Elections Supply box is found inside the blue supply bag on wheels.
- Verify the date, time, election, and precinct information is correct on the Scanner screen.
- Press “Go to Voting Mode”.
- Cut the seals from the two black doors located on the front of the unit at the bottom.
- Unlock the doors with the flat silver key.
- The top door is the auxiliary ballot door. It should only be used if there is a problem with the scanner. Verify it is empty. Close the door and lock it.
- The bottom door is the main ballot door. There is a blue ballot bag inside the door.
- Verify the bag is unzipped and the flap is folded over the outside.
 - When a voter scans their ballot it will drop into the blue ballot bag.
- Close the door and lock it with the flat silver key.
- Remove a numbered seal from the yellow security bag and seal it around the silver loop.
 - It is the same loop you removed the original numbered seal from.
- The Scanner is ready to accept voted ballots.

Electronic Poll Books

- Open the black and silver case containing the Electronic Poll Book.

- Take out the Poll Book and set it up by resting it on the table with the kickstand on the back.
- Insert the cord found inside the case in the back of the Poll Book in the plug marked with the yellow dot.
- Inside the blue supply bag on wheels is a clear box containing the Printer and signature pad for the Poll Book.
- Insert the signature pad cord in the back of the Poll Book in the slot marked with the blue dot.
- There are 2 cords for the Printer; one cord connects the Printer to the power outlet and one cord connects the Printer to the Electronic Poll Book.
 - The outlets for the Printer are located on the left side of the Printer by opening the rubber cover. Insert the larger cord labeled “Printer Cord” to the Printer and into a power outlet.
 - Insert the smaller cord into the printer and then into the back of the Poll Book in the plug marked with the red dot.
- Turn on the Printer by pushing the red button.
- Turn on the Poll Book by flipping the switch found under the black rubber cover at the top of the Poll Book.
- Do Not Remove the Security Seal sticker.
- The Poll Book is touch screen. You can either use your finger or the stylus found beside the black rubber cover to use the Poll Book.
- Click “Launch Express Poll”.
- Make sure correct date and time are set and adjust with the “+” and “-” buttons if it is not correct. Once it is correct click “Set Clock Time”.
- Verify Polling Location information – Click “Ok. This is Correct Poll”.
- Click “Open Polls” when it is 7:00 AM and your Poll Book is now ready to look up Voters and issue Ballots.

- For detailed instructions on looking up Voters and issuing Ballots refer to the packet inside each case.

White Election Supplies Box

- 2 copies of the Election Officers' Oaths are completed and signed by each poll worker and then placed in their respective gold envelopes; Envelopes G & H.
 - The Judge of Elections administers the oath to the poll workers.
 - The Minority Inspector administers the oath to the Judge of Elections.
- The Affidavit of Voter Identification is completed and signed by each poll worker. The completed form is put in the large gold Envelope marked as "Election Return Envelope A".
- The large white envelope titled "Postings" is opened. This envelope contains information for Voters, election procedures, Voters' rights, and penalties.
 - There are three copies of each sign. They are to be displayed in three areas at the Polling Place.
- A "Pay Voucher" is given to each poll worker to complete with their personal information and circle the position they held. The Vouchers are then signed by the Judge of Elections and returned to the Elections Office at the end of the night to process for payment. The Minority Inspector signs the Judge of Elections's Voucher.
 - The completed pay vouchers are placed in the yellow security return bag.
- The Two Numbered List of Voters gold books are given to poll workers to write down the name and party of each Voter as they sign in.
- The other Forms can be kept in the box or if there is room they can be organized on the table to reference and use as needed.